

Info-Post Display Stand Installation Guidelines


KFIP-001, 002, 003

3

Attach End Cap to the top of the Vertical Extrusion



2

Position the Panel Supports symmetrically on the Vertical Extrusion using the toggles. Affix the Easy Access Pockets

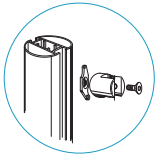


1


Attach the Vertical Extrusions to the floor bases using Insert Blocks, with set screws and a hex-key

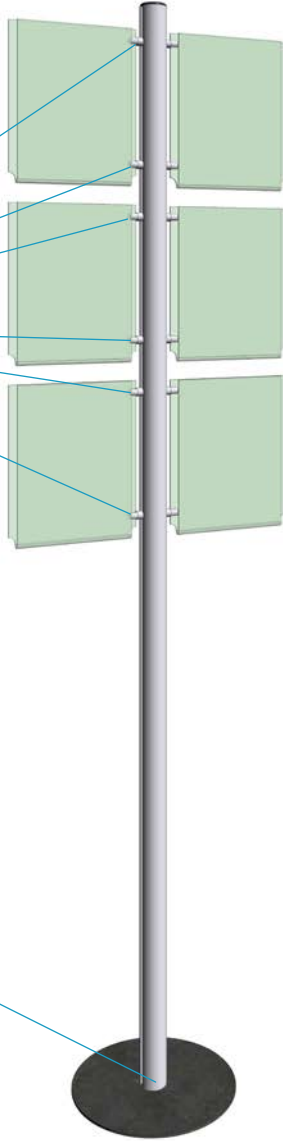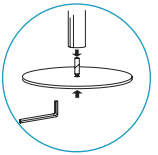


INDEX OF APPLICABLE MODELS:

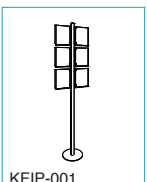

KFIP-001

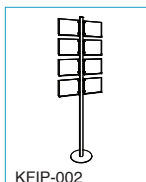

KFIP-002

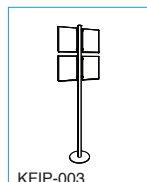

KFIP-003

Info-Post Display Stand Installation Guidelines


KFIP-004, 005

3

Attach End Cap to the top of the Vertical Extrusion



2

Position the Panel Supports symmetrically on the Vertical Extrusion using the toggles and affix the Hook-on Pockets or Info Banners (see **ADDITIONAL RESOURCE** below for instruction links)

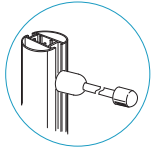

1

Attach the Vertical Extrusions to the floor bases using Insert Blocks, with set screws and a hex-key

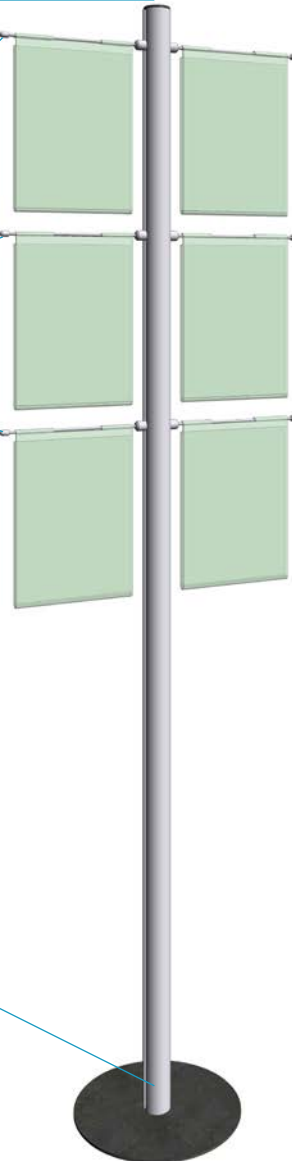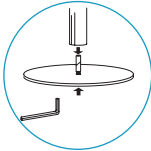


Read instruction sheet carefully before starting assembly | Separate all parts and check quantities | Account for all parts before discarding any packaging materials


ADDITIONAL RESOURCE LINKS:

Reference the **Channel Fixing Installation Guide** for detailed assembly directions

INDEX OF APPLICABLE MODELS:

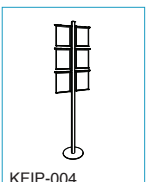

KFIP-004

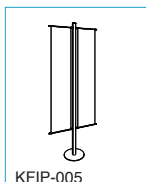

KFIP-005

Info-Post Display Stand Installation Guidelines


KFIP-006, 007

3

Attach End Cap to the top of the Vertical Extrusion


2

Position the Panel Supports symmetrically on the Vertical Extrusion using the toggles and affix the Leaflet Dispensers (see **ADDITIONAL RESOURCE** below for instruction links)

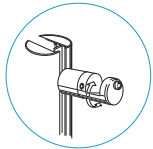

1

Attach the Vertical Extrusions to the floor bases using Insert Blocks, with set screws and a hex-key


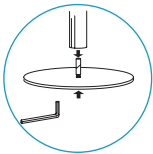


Read instruction sheet carefully before starting assembly | Separate all parts and check quantities | Account for all parts before discarding any packaging materials

ADDITIONAL RESOURCE LINKS:

Reference the **Vertical Profile Fixing Installation Guide** for detailed assembly directions

INDEX OF APPLICABLE MODELS:

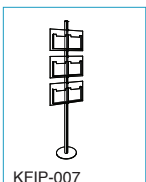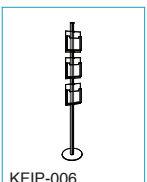

Info-Post Display Stand Installation Guidelines


KFIP-008, 009, 010

3

Attach End Cap to the top of the Vertical Extrusion


2

Position the Panel Supports symmetrically on the Vertical Extrusion using the toggles and affix the Graphic Board and Leaflet Dispensers (see **ADDITIONAL RESOURCE** below for instruction links)

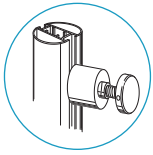

1

Attach the Vertical Extrusions to the floor bases using Insert Blocks, with set screws and a hex-key

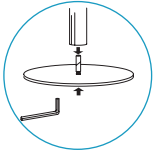

Read instruction sheet carefully before starting assembly | Separate all parts and check quantities | Account for all parts before discarding any packaging materials

ADDITIONAL RESOURCE LINKS:

Reference the **Vertical Profile Fixing Installation Guide** for detailed assembly directions

INDEX OF APPLICABLE MODELS:

