



# Installation Guidelines





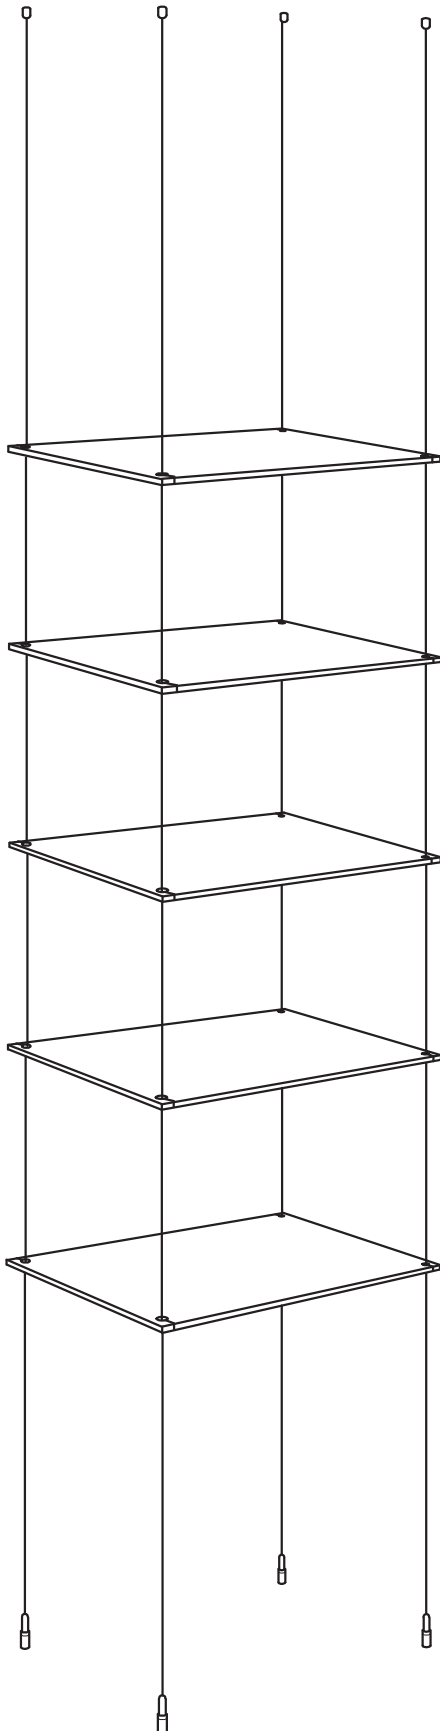


## Glass Shelving Fixing - CS01 Support Installation

- 1) Mark cable positions on floor area. Lay shelves on floor, and mark cable positions, or use measurements below (fig 1).

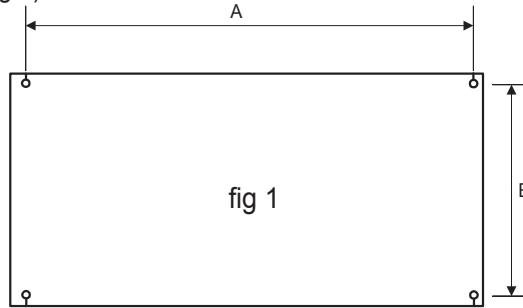


- 2) With the use of a plumb line, mark and fix cables to ceiling (ensuring that fixings are secure).
- 3) Install cables as per "Cable Fitting Instructions" for CA4 supplied.
- 4) Shelf fitting - As a guideline, the lowest shelf should be fixed approx. 24" from the floor, and subsequent shelves approx 12" apart.
- 5) Fix four shelf supports (CS01) on center of four cables (see fig 2), and then attach shelf. Adjust shelf to a horizontal position; preferably with a spirit level. Repeat procedure for other shelves.

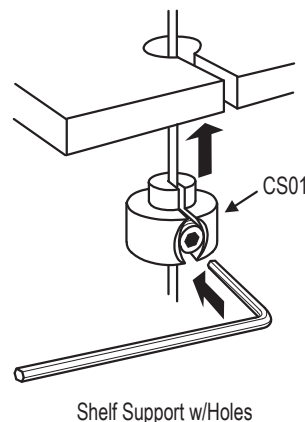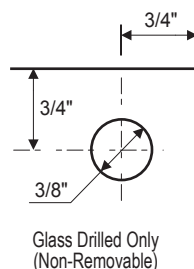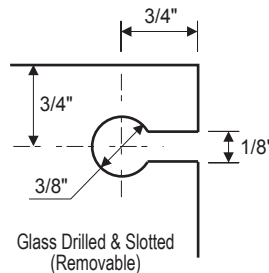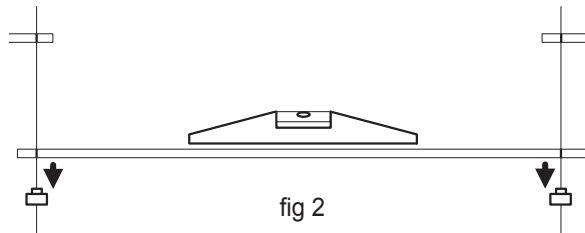


## INSTALLATION TIPS

### Concrete

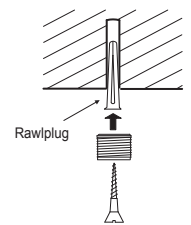


1

### Wood

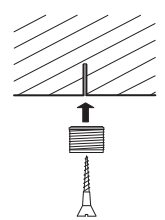


2

### Lathe & Plaster

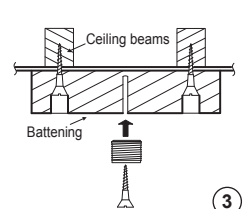


3

### Plasterboard

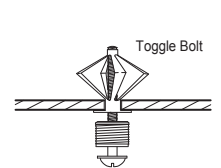

4

### Suspended Ceiling

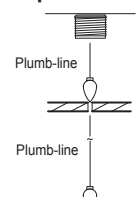

5