
Installation Guidelines

NOVADISPLAY®

Aluminum Projecting Supports

800.753.9688 • www.novadisplay.com



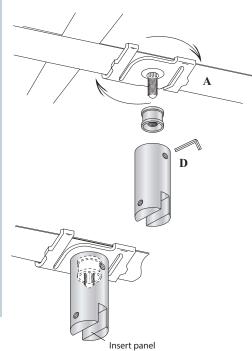



**Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety.

1) Install

- Twist on clip for T-bars (A) mounting hardware:
- Wood screw with anchor for drywall/plaster
- Toggle bolt or screw with wall anchor for concrete

If using wood screw for installation hardware, insert the screw through the anchor or fitting (B) and secure on surface.

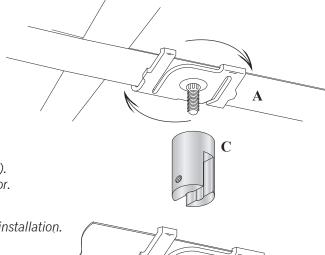




2) After step 1) is complete, slide the projecting supportonto the anchor (D). Tighten the M4 set screw once the supportis seated flush against the anchor.

3) Insert panel and tighten M4 set screw to hold panel in place.

It is important to check that parts are properly tightened at the end of each installation.

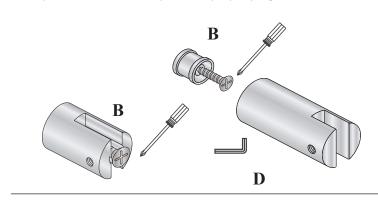















* When installing a panel requiring two supports, use a guide for alignment prior to mounting.

^{*} Installation instructions apply to any of the sizes/designs that are available.