
Totem Display Installation Guidelines



KFRS-001 • KFRS-015

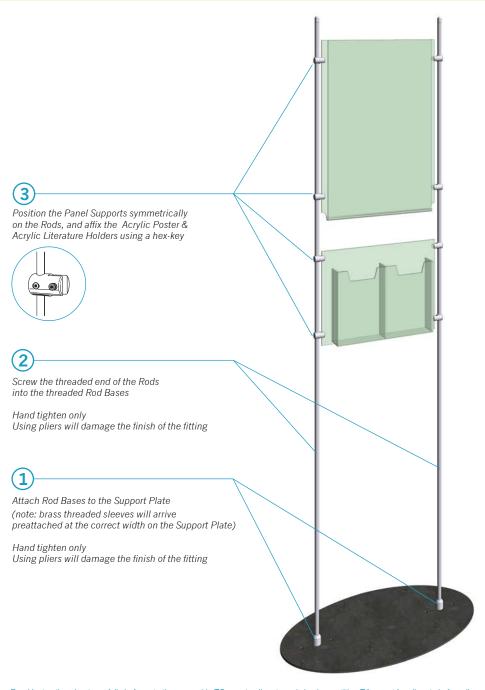


Read instruction sheet carefully before starting assembly DSeparate all parts and check quantities DAccount for all parts before discarding any packaging materials

KFRS-014

KFRS-013

INDEX OF APPLICABLE MODELS:

KFRS-011

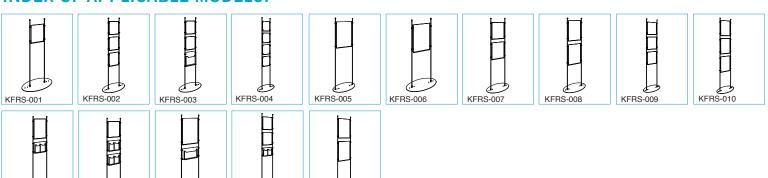


Toll: 800-753-9688 | Phone: 707-535-0253 | Fax: 707-535-0254 | E-mail: info@novadisplay.com | Web: www.novadisplay.com

KFRS-015

Totem Display Installation Guidelines



KFRS-016 • KFRS-018

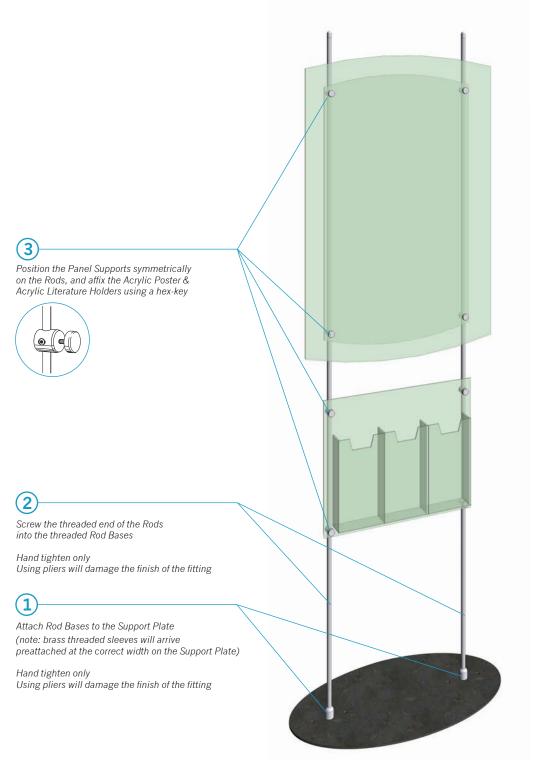

Read instruction sheet carefully before starting assembly DSeparate all parts and check quantities DAccount for all parts before discarding any packaging materials

INDEX OF APPLICABLE MODELS:




Toll: 800-753-9688 | Phone: 707-535-0253 | Fax: 707-535-0254 | E-mail: info@novadisplay.com | Web: www.novadisplay.com

Totem Display Installation Guidelines




KFRS-021 • KFRS-025

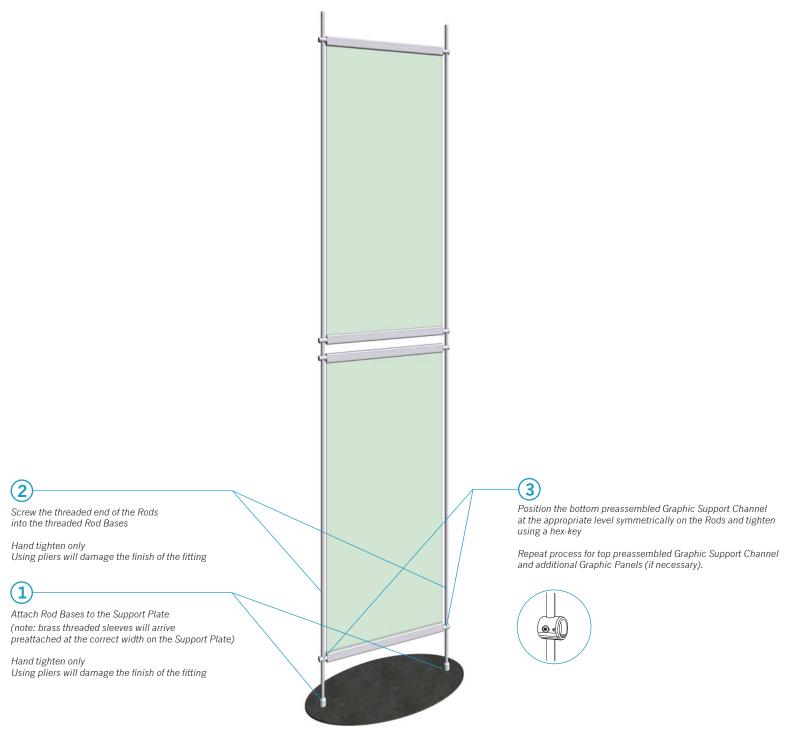

Read instruction sheet carefully before starting assembly DSeparate all parts and check quantities DAccount for all parts before discarding any packaging materials

INDEX OF APPLICABLE MODELS:



Toll: 800-753-9688 | Phone: 707-535-0253 | Fax: 707-535-0254 | E-mail: info@novadisplay.com | Web: www.novadisplay.com