

Installation Guidelines

NOVADISPLAY®
INNOVATIVE DISPLAY SOLUTIONS

Aluminum Through Standoffs


800.753.9688 • www.novadisplay.com




ALUMINUM STANDOFFS

- Clean, attractive, modern appearance.
- Quality - we use only high-grade: satin silver anodized.
- Variety - we supply the greatest selection of sizes and finishes to accommodate all your project needs.
- Custom sizes available.

CONCEPT IDEAS

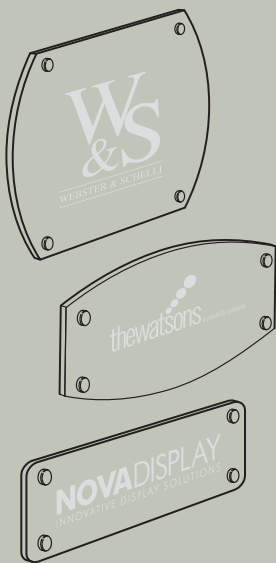

MOUNTING OPTIONS

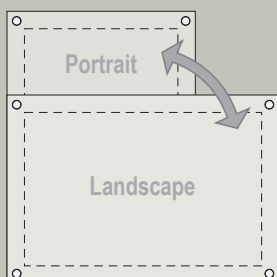

****Always check the installation surface to ensure that the substrate will be strong enough to hold the weight of the panel. All installation must be done so with proper hardware and protective gears to ensure safety.**

1) For each standoff, drill a 6.5mm (1/4") hole on the panel. Refer to your panel manufacturer/supplier on how to do so for different panel materials.

Once the holes are drilled, you can use the panel as a template to determine where on the installation surface to drill the necessary holes.



2) Install wall anchors. Use proper installation hardware.

- Wood screw with anchor for drywall/plaster
- Toggle bolt or screw with wall anchor for concrete

3) Screw standoff barrels tightly onto the wall anchors. Using rubber strap wrench to tighten is recommended.

4) Install cap and panel. The caps can be tightened by using a M4 allen wrench on the small hole located on the side of the cap or by using a soft-jaw adjustable plier.

Important: Make sure all parts are securely tightened.

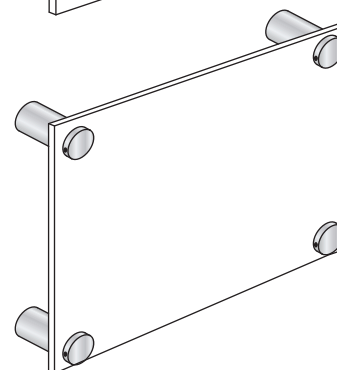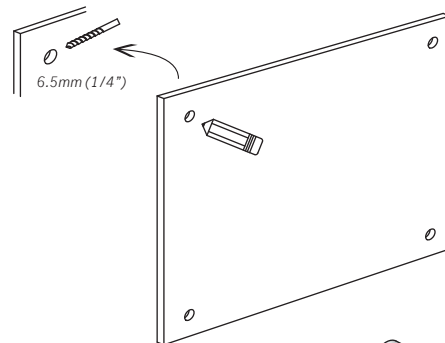

* Installation instructions apply to any of the sizes/variations that are available.

